

Hello!

Model: LPH-TW37
True Wireless Metal Earbuds
User Manual

Dear Customer

Thank you for choosing LinkTech's products, we appreciate your choice to purchase this product and we're hoping that you'll have a great time using our product.

Please share your experience with our products through LinkTech's customer services center either by phone, Whatsapp or Bip.

Feel free to express your opinions or tell us your suggestions on our channels. LinkTech will happily review all your invaluable feedback in order to improve our products and services.

If you encounter any problem or have difficulties with this product, please refer to the User's Manual, you can contact our customer services if you have any further questions.

LinkTech considers your priceless recognition and support as an encouragement to stay focused on providing high quality products and a motivation to move forward, improve our services and expand our workspace in the future.

LinkTech's Sales Team

ANC TWS Wireless Earbuds



ENC 4 Microphones for clearer calls



User's Manual

We recommend using the cable that was included in the package to charge the earphones

Contents List



User's Manual/ Warranty Card (1PCS)

o---------

USB-A to USB Type-C Charging Cable (1PCS)



Charging Case



TWS Earbuds (2 PCS)

Product Characteristics and Features

- True ANC support. Active Noise Cancellation allows you to focus on your favourite music without any distractions
- Environmental Noise Cancellation (ENC): enhances voice clarity during calls by reducing background noise with embedded guad mic
- · A stylish and very comfortable in-ear design with ergonomic touch control
- · Compact and nice charging case with 400mAh battery and ASAP charging feature, for longer playing rime and lesser charging time.
- Large 13mm dynamic drivers optimized to deliver a rich and deep
- bass sound · Smart touch controls, to control your music and calls with a tap of a
- finger. · Bluetooth v5.4 Wireless Technology support, with TWS feature to
- connect two devices at the same time · Game Mode Support, allows you to have lower latency for
- smoother experience · Hall Switch Function to pair your phone or device with these
- earbuds quickly by just opening the charging case's lid. IPX4 water resistance

Safe Use Information

Read the instructions carefully before use, appearance and specifications of the device may be resized and different from the image in this manual without prior notice.

Do not listen to music at maximum volume for long periods of time as this can damage your hearing.

Safe Use Information

Consult a physician regarding the use of this device with medical equipment, or consult a medical device manufacturer for this matter.

Use only certified wall chargers.

Product Specifications

Bluetooth Chipset IC	JL7003D8	
Bluetooth Version	V5.4 with TWS feature	
Bluetooth Protocol	HFP, A2DP, HSP, AVRCP, AVCTP, AVDTP, SPP, SMP, ATT, GAP, GATT, RFCOMM, SDP, L2CAF	
Transmission Distance	Approximately 10m	
Frequency Response	20Hz ~ 20KHz	
Microphone	Quad Mic with ANC and ENC support	
Audio Drivers	Ф13mm Dynamic	
Impedance	16Ω	
Earbuds Playing Time	Up to 6.0 Hours at 60% volume	
Earbuds Talking Time	Up to 5.5 Hours at 60% volume	
Water Resistance Level	IPX4	
Charging Features	3C Fast Charging, Hall Switch Mode	
Charging Port	USB Type-C	
Charging Input	DC 5V / 1A	
Charging Time	~ 1.5 Hours	
Earbuds Charging time	~ 30 Minutes	
Battery Type	Li-ion Polymer	
Charging Case's Battery	3.7V / 400mAh	
Earbuds' Battery	2X 40mAh	
No of Charging Time	2 ~ 3 times	

No not do the following with the device and battery

- · Do not disassemble it on your own
- Do not repair it on your own
- Do not try to modify it
 - · Do not overheat the battery
 - · Do not expose it to direct sunlight
 - DO not immerse it in water
 - Keep it away from sources of fire or open flame
 - Do not expose this product to very low or very high temperatures, below 0°C or above 45°C
 - · Contact an authorized service technician.

⚠ Do not use this product during a thunderstorm, there is a risk of electric shock or device malfunction.
↑ The metal contacts of the headphones and charging case must

be free of dirt and not covered by foreign objects.

Do not use this device in places with strong exposure to an

1\(\) Do not use this device in places with strong exposure to an electromagnetic field, this can lead to incorrect operation or damage the device.

Ouick Start Guide

- Before using the device, remove the earbuds from the case and remove the protective film from the charging contacts of the earbuds.
- Fully charge the case along with the headphones, use the supplied cable (power adapter is not included).
- 3. This case has a Notification LED to indicate the charging statue as follows:

Flashing White LED = the case is recharging Solid White LED = the case is fully charged

Each earbud has a Notification LED that shines in Solid White
 Colour when the earbud is recharging.

Power On

- Simple open the lid of charging case (When earbuds are inside). The earbuds will power on automatically.
- If the earbud is outside the charging case, press and hold the earbud's touch control for 3 seconds to power on manually.

Power Off

- Remove both earbuds from your ears, and place them back into the charging case in the correct orientation then close the lid.
- · Earbuds will automatically switch off (and enter into charging mode).
- Earbuds will automatically power off if they're not connected to any device for more than 10 minutes

When earbuds are powered on, it will automatically enter pairing mode, the notification LED of the left earbud will flash Red and White, the notification LED of the right earbud will be turned off.

- Open Bluetooth on your device and search for "Link-TW37" in the list of available devices
- · Select "Link-TW37" from the list.
- TW37 Earbuds are now paired with your device and ready to use, the notification LED of both earbuds will be light off once connected.

Note: These earbuds will automatically connect to the last paired device as soon as you open the lid of the charging case.

Earbuds Touch Controls

Play / Pause	Tap either earbuds twice	2x Tap Left / Right
Previous Track	Tap the left earbud thrice	3x Tap Left
Next Track	Tap the right earbud thrice	3x Tap Right
Volume Down	Tap the left earbud once	1x Tap Left
Volume Up	Tap the right earbud once	1x Tap Right
Answer / End Call	In phone call, Tap either earbuds twice	2x Tap Left / Right
Reject Call	When ringing, Touch and hold either earbuds for 2 seconds	2 Sec Hold Left / Right
Voice Assistant	Tap either earbuds 4 times	4x Tap Left / Right
Game Mode	Touch and hold the left earbuds for 2 seconds	2 Sec Hold Left
ANC / Transparent	Touch and hold the right earbuds	2 Sec Hold Right

To Reset Earbuds

- Make sure your earbuds are fully charged.
- Take out the earbuds from charging case.
- Tap either earbud 5 times.
- The notification LED of earbuds will flash white light 3 times and a voice prompt "beep" will be heard to indicate earbuds have been reset
- Place the buds inside the charging case and repeat the pairing process.

Before that, remove Link-TW39 from the list of paired Bluetooth devices on your phone.